


PROJECT PATTERN CRAFTSMAN'S CHISEL CASE

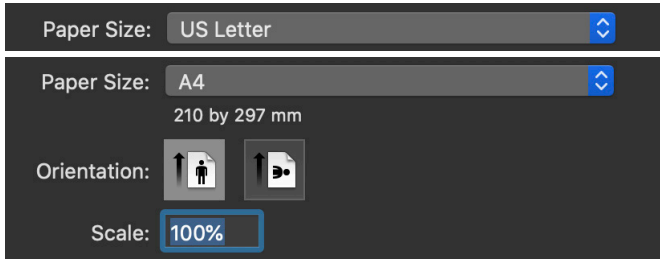

Printing Instruction

The pattern is designed to be printable. We took into consideration the standard printer margin for letter and A4 sized papers.

Select "US letter" or "A4" under paper size. Make sure portrait mode is selected.


Be sure to click "scale: 100%" to ensure that the page is going to print to scale.

Recommended Leather Weight


1.6mm~2.0mm (4~5oz)

Instruction

1. Print out the pattern on heavy card stock & cut out the pieces.
2. Trace the pattern into leather and cut out leather panels.
3. Apply leather finish with sponge. Allow to dry.
4. Burnish the back (rough) side and edges with gum tragacanth.
5. Mark 3mm wide guideline along pocket edges, strap ends and cover outer edges.
6. Mark pocket seams and punch stitching holes.
7. Mark pocket seams on cover and punch stitching holes.
8. Glue edges of the cover and pocket, then stitch center seam together.
9. Glue and stitch strap, pocket and cover together.
10. Complete.

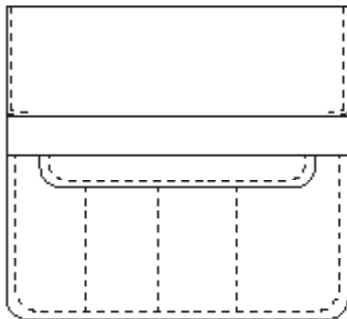

PRINTABLE TEMPLATE

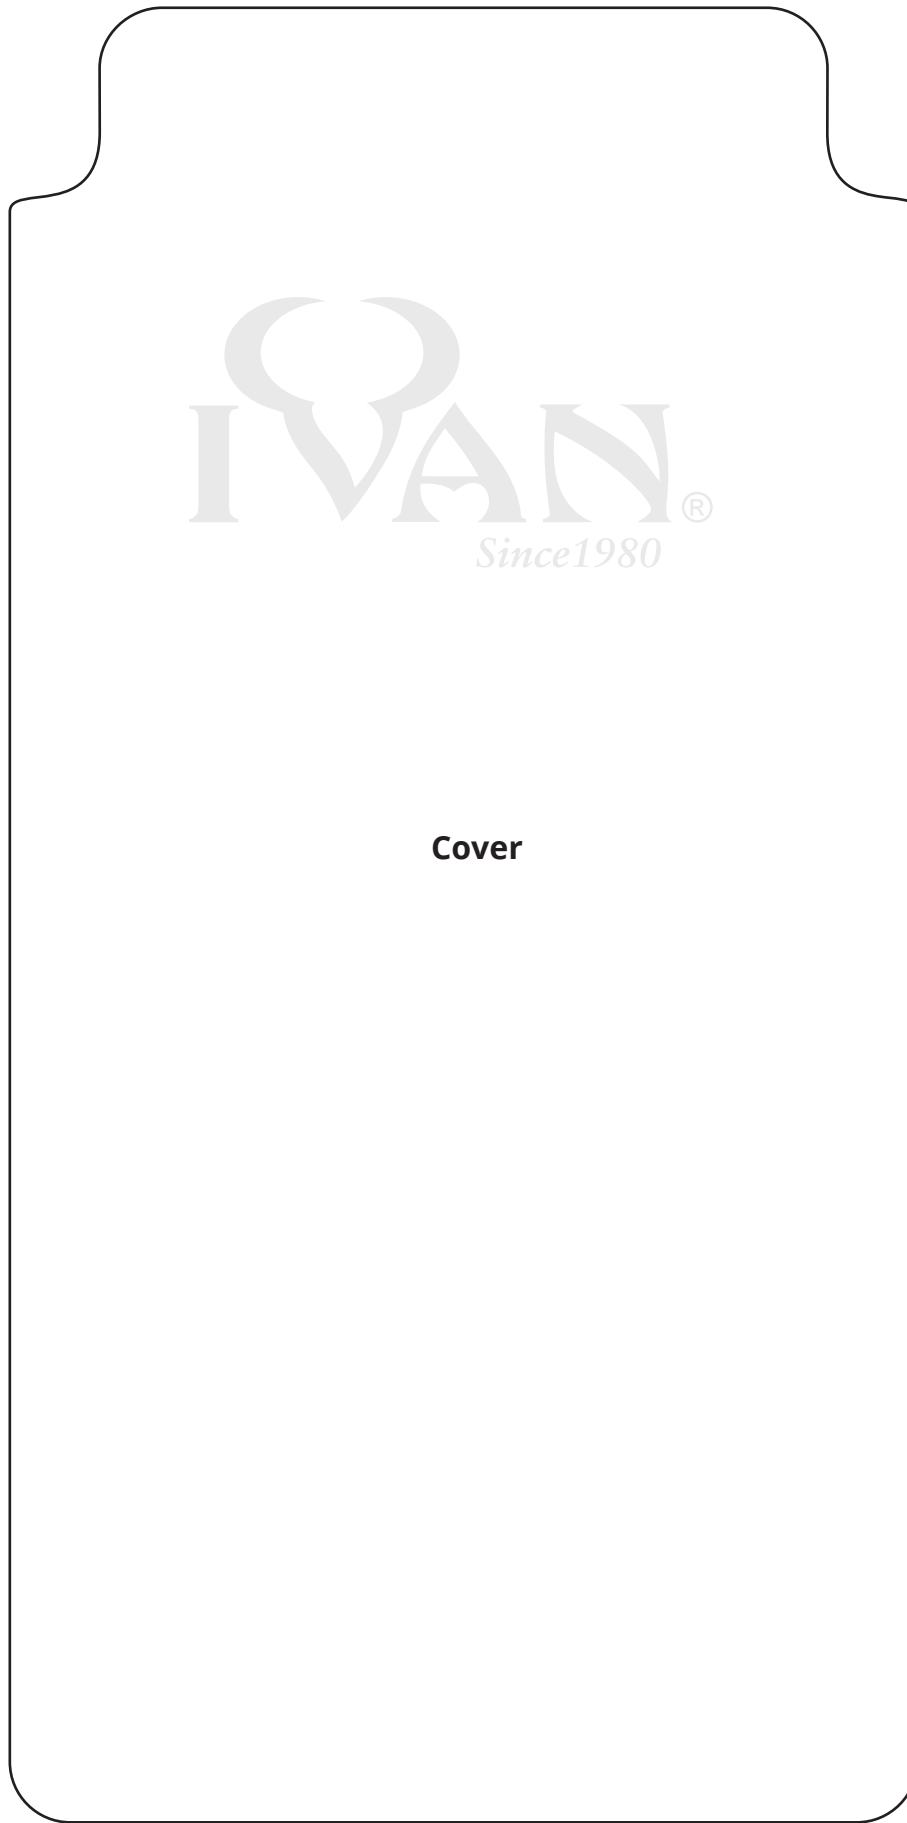


Measure this ruler against you own to make sure the pattern is to scale.

CRAFTSMAN'S CHISEL CASE

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2021 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

PRINTABLE TEMPLATE

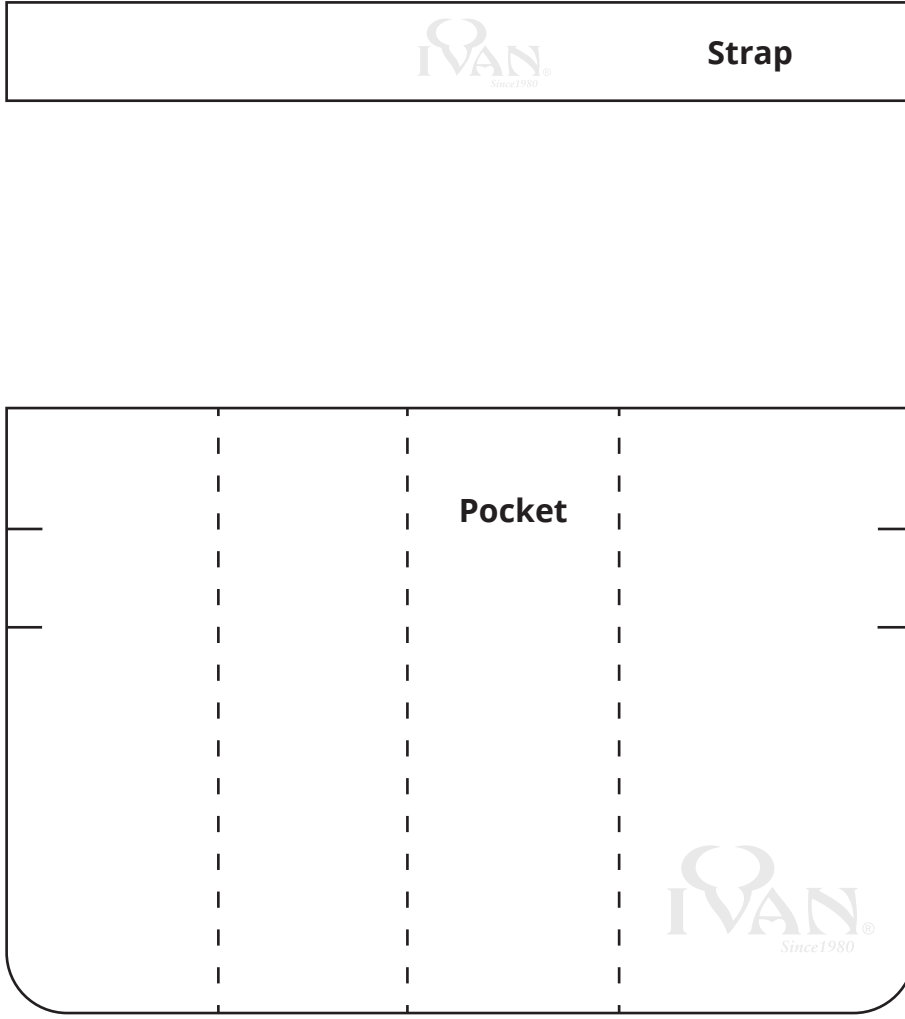

Measure this ruler against you own to make sure the pattern is to scale.

CRAFTSMAN'S CHISEL CASE

Share your projects with us using the hashtag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2021 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED