


PROJECT PATTERN BRAIDED LEATHER CUFF

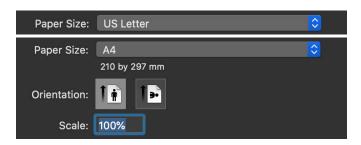

Printing Instruction

The pattern is designed to be printable. We took into consideration the standard printer margin for letter & A4 sized papers.

Seletct "US letter" or "A4" under paper size. Make sure portrait mode is selected.

Be sure to click "scale: 100%" to ensure that the page is going to print to scale.



For more information on Double Loop Lacing, visit the Tips & Tricks section of our website.

Recommended Leather Weight


1. 1.6mm~2.0mm (4/5oz) 2. 1.2mm~1.6mm (3/4oz)

Instruction

1. Print out patterns on heavy card stock. Trace pattern into leather, and cut out all pieces.


BRAIDED LEATHER CUFF

- 2. Punch holes using rotary punch.
- 3. Apply base coat and edge color on leather tab and allow to dry.
- 4. Trace and cut out fillers. Apply contact cement on filler and front piece and glue together. Use roller to remove any air bubbles.
- 5. Punch holes all the way through.
- 6. Mark 2mm guideline along the edge and punch lacing holes.
- 7. Insert rivets and fasten with setter. Use scrap leather or filler as backing to protect the surface of your rivets during installation.
- 8. Insert leather tab and fasten slotted concho with rivets.
- 9. Glue brass piece, filler, front and back pieces together. Use lacing nipper to pierce through lacing holes.
- 10. Skive the tip of your lace and cut to a point and load the needle.
- 11. Start with a hole, leaving extra at the end, roll over the edge to go the next hole. Take the needle and go through the "X" and pull tight. Repeat this step all the way around.
- 12. Bend and shape the bracelet.
- 13. Complete.

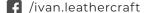

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

PRINTABLE TEMPLATE

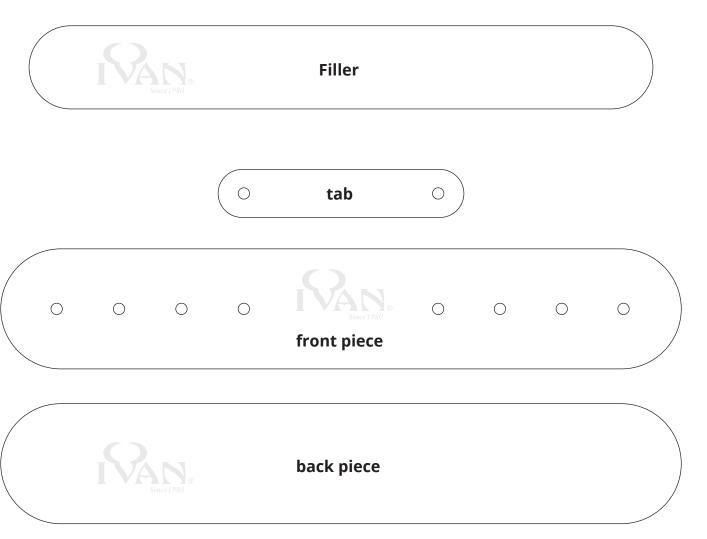



Measure this ruler against you own to make sure the pattern is to scale.

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook