


PROJECT PATTERN PERFORATED COIN POUCH

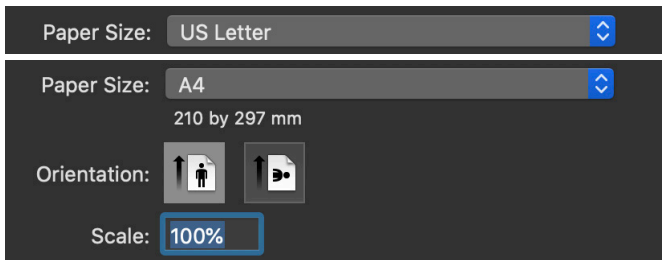

Printing Instruction

The pattern is designed to be printable. We took into consideration the standard printer margin for letter & A4 sized papers.

Select "US letter" or "A4" under paper size. Make sure portrait mode is selected.

Be sure to click "scale: 100%" to ensure that the page is going to print to scale.

Running stitch instruction:

1. Prepare appropriate thread length by measuring seam 5 times. Cut and set aside.
2. Thread needle and tie a knot to secure it in place.
3. Grain (smooth) side up, push needle through first hole, down to second and up the third hole. Leave extra thread in the back (rough) side. Pull each stitch tight.
4. Continue to stitch in this manner. When you reach the last hole, turn and stitch back to starting point, filling in alternate stitches.
5. Tie ends of thread together and trim off excess.

Instruction

1. Pre-cut lining leather using kit panels and set aside.
2. Punch desired patterns on leather panels using shape punches.
3. Apply leather adhesive along all edges and avoid patterned area to prevent overspill adhesive.
4. Use roller to squeeze out any air bubbles.
5. Apply edge base coat and allow to dry before applying edge color.
6. Insert keeper and stitch together.
7. Overlap strap and strap tab and stitch together.
8. Stitch strap on body panel.
9. Take front panel, count 20 holes from the top edge, fold and overlap to 16th hole, crease the corner slightly to mark the position. Do the same on the other side. Stitch front and body panel.
10. Apply base coat along the edges, wait till it dries completely before applying edge color.
11. Complete.

