


# PROJECT PATTERN UNIVERSAL LEATHER TOOL BELT

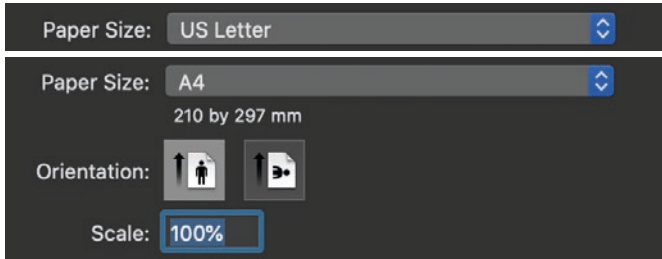

## Printing Instruction

The pattern is designed to be printable. We took into consideration the standard printer margin for letter & A4 sized papers.

Select "US letter" or "A4" under paper size. Make sure portrait mode is selected.

Be sure to click "scale: 100%" to ensure that the page is going to print to scale.

## Instruction

1. Print out download pattern.
2. Trace leather pattern on leather and cut out.
3. Skive (thin) the edges of the panels, indicated in grey on the pattern, to approximately 0.8mm (1/32") thickness.

### FRONT POCKETS:

1. Use paper template to mark fold areas.
2. Fold leather inside out and hammer flat.
3. Mark 3mm wide stitching line and punch stitching holes on both sides with diamond chisels.
4. Sew front pocket using the saddle stitch.
5. Once both front pockets are completed flip inside out.
6. Use wood slicker or bone folder to push out corners and hammer edges flat.

### FRONT PANELS

1. Mark pen holder location and rivet location on front panel, using front panel and pen holder patterns.
2. Use wing divider to mark stitching area.
3. Attach the pen holder to front panel using Leather Adhesive Tape.



4. Punch stitching holes using diamond chisels and sew the panels together.
5. Repeat the same step to complete the other front panel.
6. Mark and punch out holes for reinforcement rivets.
7. Insert rivets and burrs, then set the hardware in place using rivet and burr setter. Cut off extra length with Rivet Cutting Pliers.
8. Use Leather Adhesive Tape to glue front pocket to front panel.
9. Fold the trim piece and hammer the seam. Apply Adhesive tape and glue the trim piece to the top edge of front panel. Hammer flat.
10. Use diamond chisel and punch out all the stitching hole.
11. Stitch the assembly together.
12. Punch out corner holes on front pocket and set reinforcement rivets

### **HANGER**

1. Glue two hanger panels together allow to dry.
2. Mark hole placement and punch out holes on both Hanger and Linking Panels.
3. Set rivets and burrs with setter. Cut off excess length with pliers.

### **BACK PANELS**

1. Attach back panels to linking panel with Leather Adhesive Tape.
2. Mark the folding line on both front panel bottom edges. Apply Adhesive tape to secure the edge to back panel. Fold the edge over and use Adhesive Tape to secure it in place and hammer the seam flat.
3. Repeat this step to complete the other side.
4. Flip the project over and use wing divider to mark bottom stitch lines.
5. 5. Mark side stitching lines and punch all stitching holes. Set aside.

### **BELT**

1. Insert Plastic Side Release Buckle and slider into the webbing and adjust to desired length. Stitch the strap end to secure the buckle in place.
2. Lay out the assembled strap on the tool belt.
3. Use Leather Adhesive tape to secure the leather tool punch to the belt.
4. Mark the stitch line on the top of the leather tool belt.
5. Punch out stitching holes with the diamond chisel and sew the belt to the leather tool pouch.

### **FINAL ASSEMBLY**

1. Stitch the leather pouch to the belt.
2. Stitch the remaining holes on the leather pouch.
3. Mark and pouch out corner reinforcement holes.
4. Install with rivets and burrs with rivet setter. Cut off any excess.
5. Project complete.


Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

# PRINTABLE TEMPLATE




**Front Panel X 2**



Tools & material available on [www.ivan.tw](http://www.ivan.tw)

UNIVERSAL LEATHER TOOL BELT

 Skive the grey area to approx. 0.8mm (1/32") thickness.




Measure this ruler against you own to make sure the pattern is to scale.

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook


COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

# PRINTABLE TEMPLATE

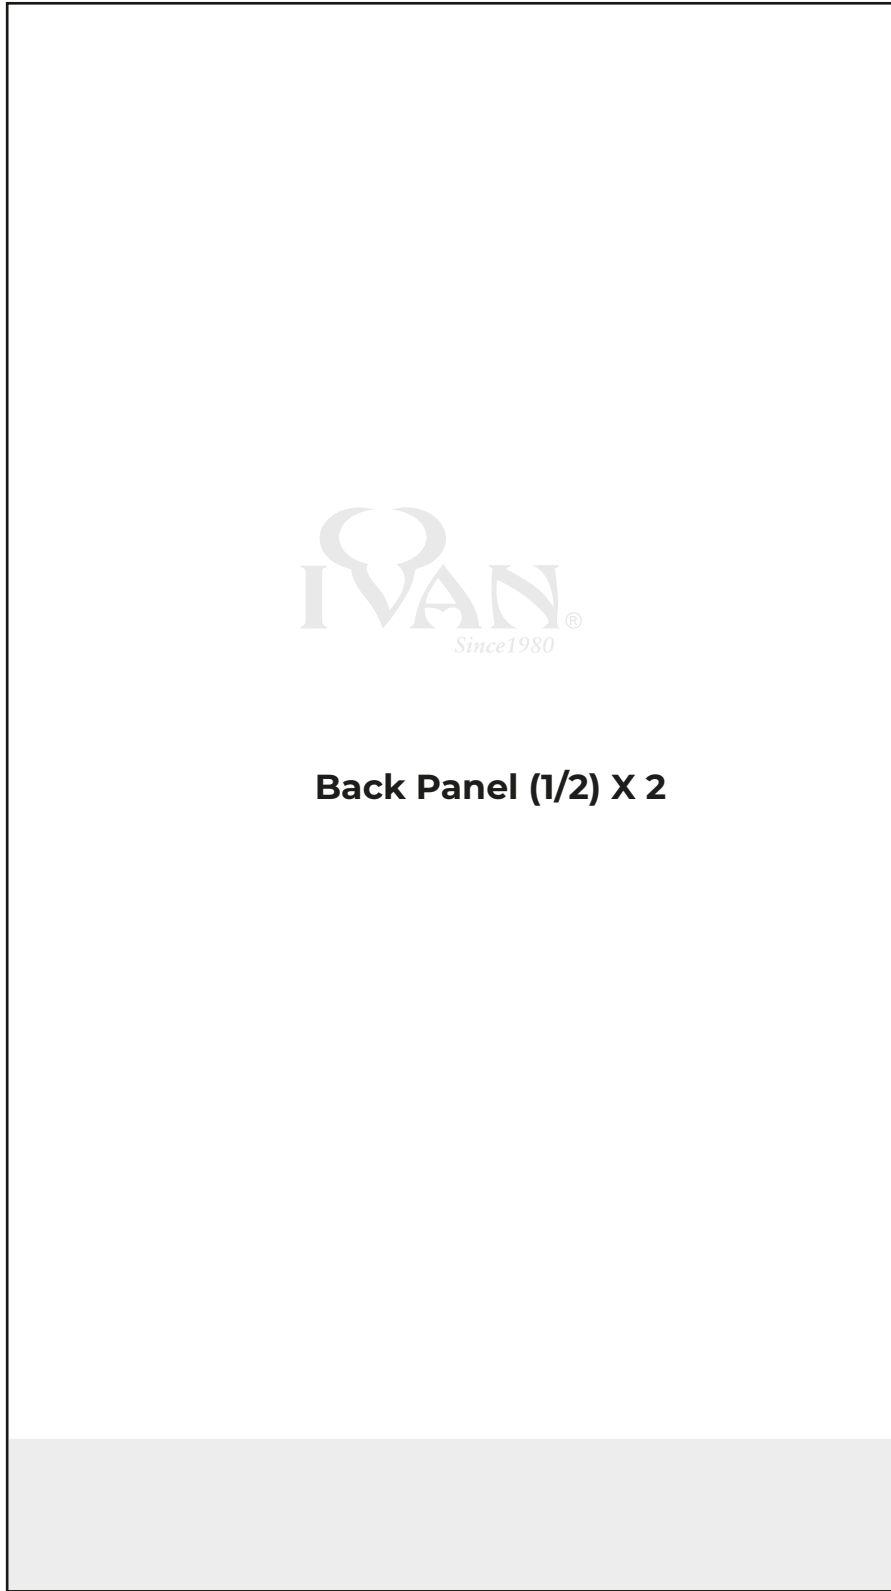

**Back Panel (1/2) X 2**

 Skive the grey area to approx. 0.8mm (1/32") thickness.




Measure this ruler against you own to make sure the pattern is to scale.

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

**COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED**

# PRINTABLE TEMPLATE

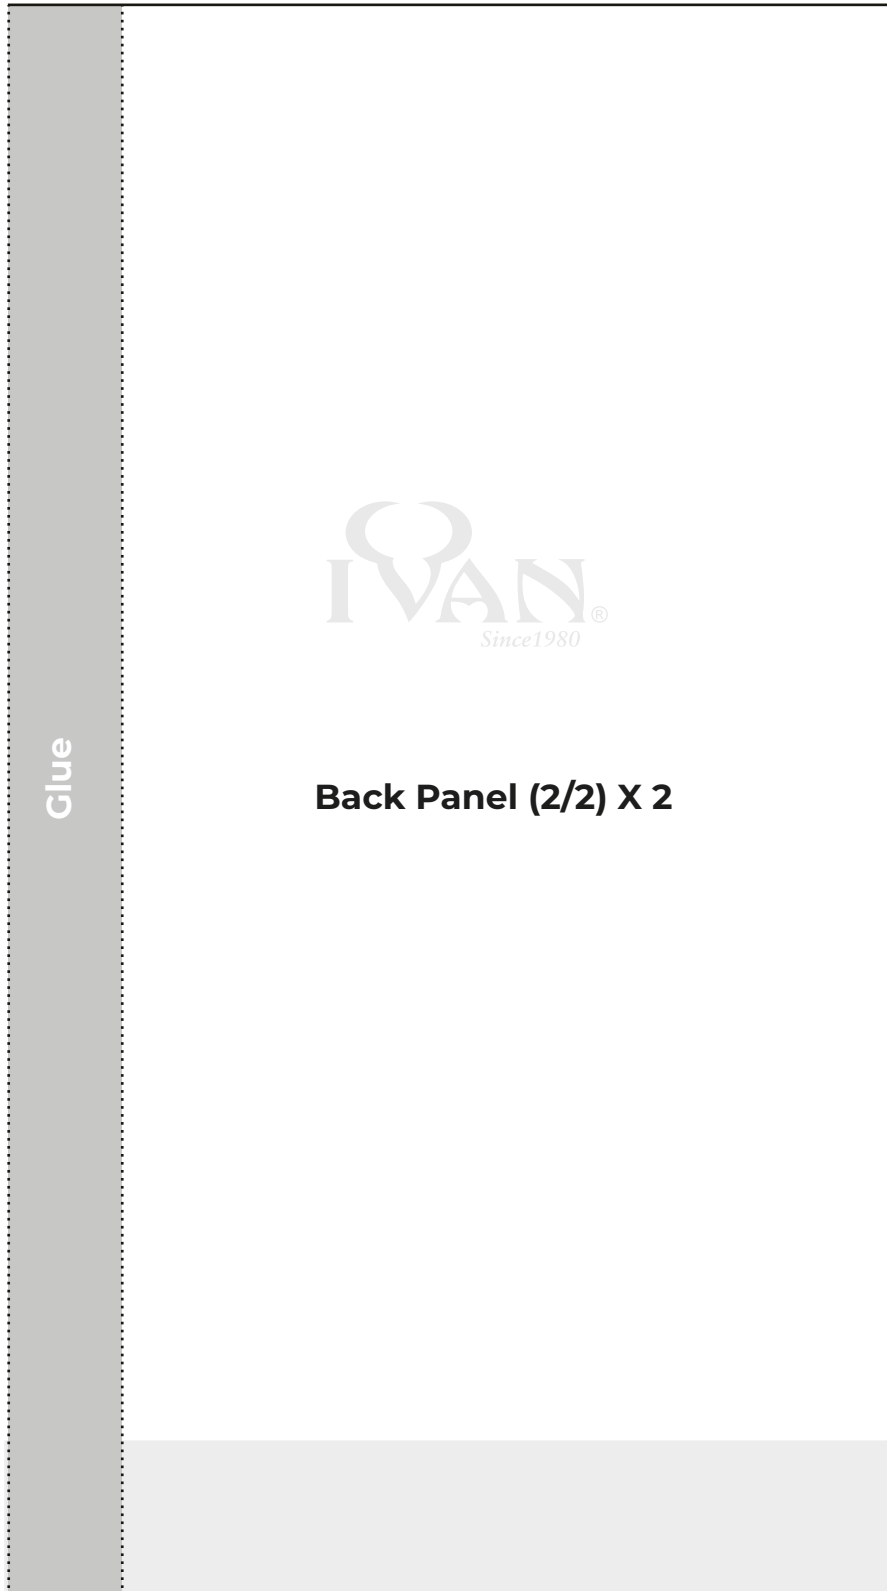


Glue



**Back Panel (2/2) X 2**

 Skive the grey area to approx. 0.8mm (1/32") thickness.





Measure this ruler against you own to make sure the pattern is to scale.


Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

# PRINTABLE TEMPLATE

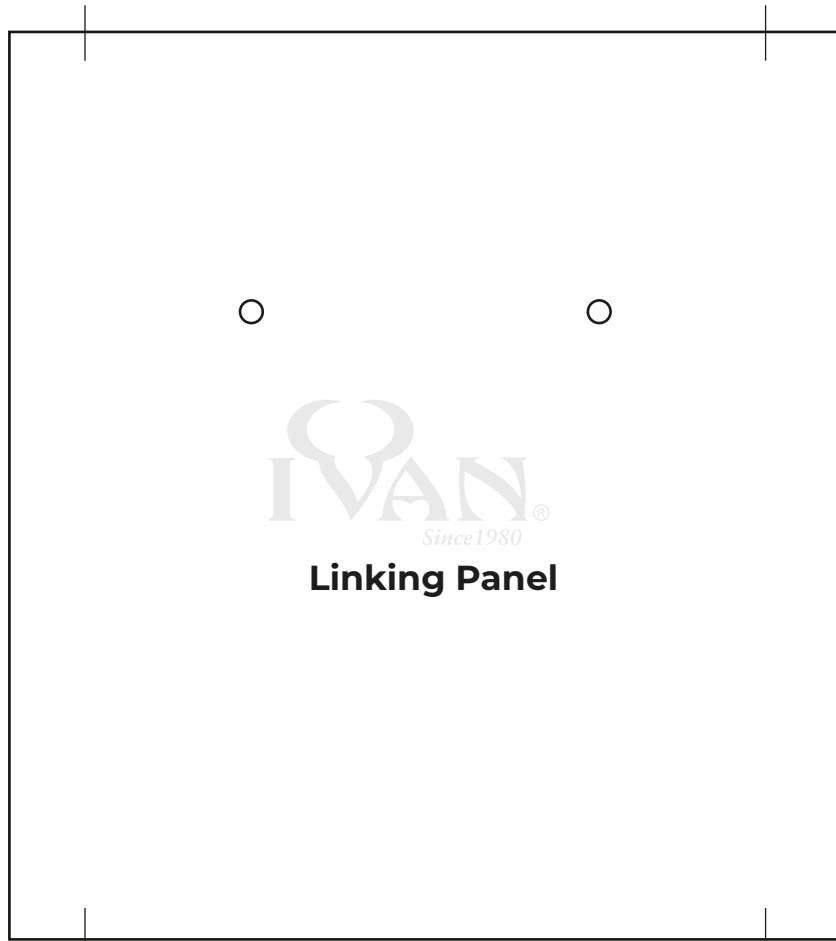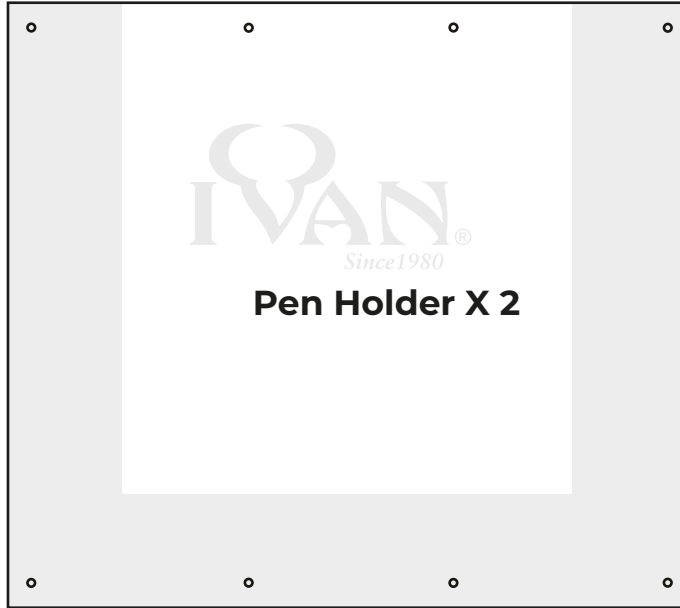

 Skive the grey area to approx. 0.8mm (1/32") thickness.




Measure this ruler against you own to make sure the pattern is to scale.

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

# PRINTABLE TEMPLATE

Tools & material available on [www.ivan.tw](http://www.ivan.tw)

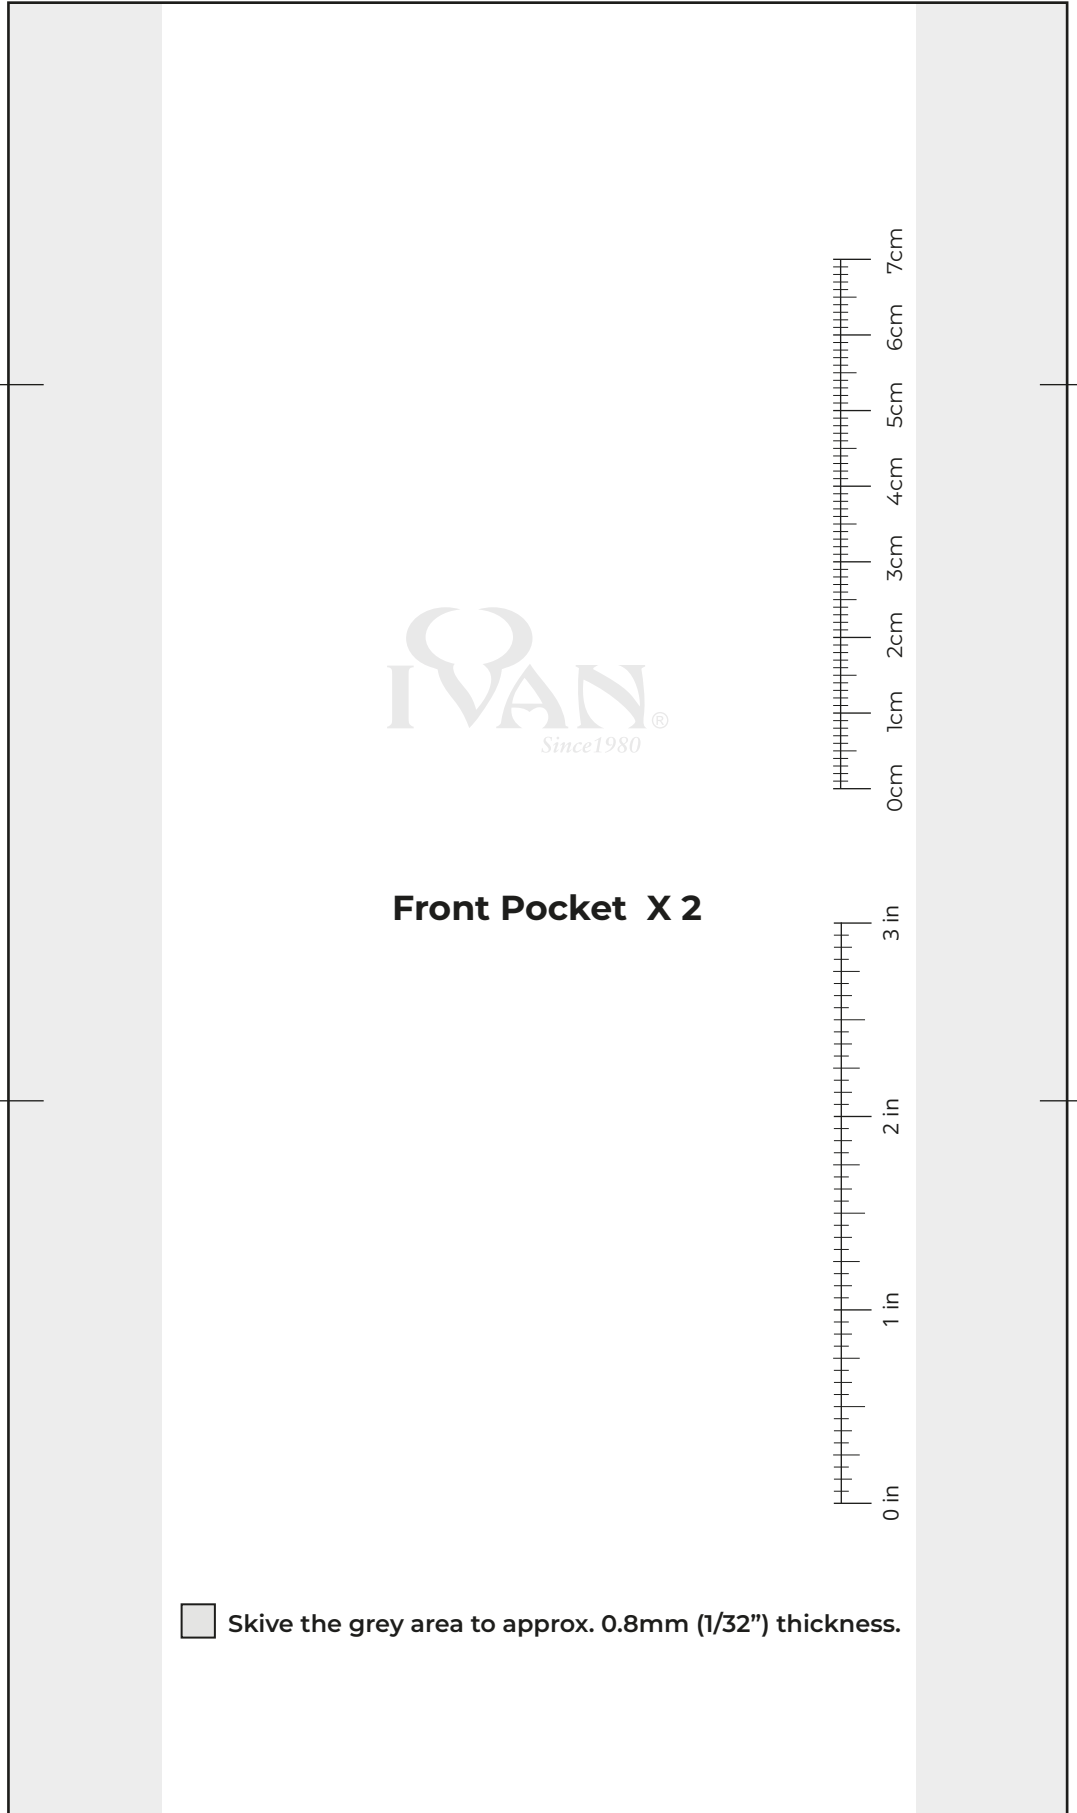

UNIVERSAL LEATHER TOOL BELT

Share your projects with us using the hashtag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2023 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED